# Eureka!

## **INSTRUCTIONS | Timberline SQ 2XT (2627811)**



### **TENT CONTENTS**

Tent body + Tent fly
Leg poles with hub (2)
Ridge pole (1) long
Spreader pole (1) short
Eave pole extensions (2) short
Frame field repair sleeve (1)
Steel stakes (8) + Plastic stakes (4)
Guylines (2)

### **QUESTIONS?**

Johnson Outdoors Gear, Inc. USA: 1-800-572-8822 www.eurekacamping.com Johnson Outdoors Canada Canada: 1-800-263-6390 www.eurekatentscanada.com

#### **TENT TIPS**

- · Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

## **TENT CARE**

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

#### WARRANTY

• Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.