

AUTOPILOT 120/136

REMOTE PAIRING AND SETUP

SYNCHING REMOTE TO MOTOR:

- Turn on remote by pushing the ✓ (OK) button. Press the ✓ again to skip through warning message.
- Push **Menu Down** once, so **Options System** is displayed at the bottom of the screen.
- Press the **Right Softkey** button to enter the **Systems** menu.
- Using the **Menu Down**, navigate to **Pair** and push the ✓ button.
- Press the **Pair** button on the top of the motor head (motor must be powered).
- Motor will have a sustained beep when paired successfully.
- Confirm motor function by using the **Steer Left** and **Steer Right** arrows to turn the steering servo, the **Prop** button, and the **+/-** to turn the motor shaft on.


SETTING BOAT LENGTH OFFSET:

- Push **Menu Down** once so **Options System** is displayed at the bottom of the screen.
- Press the **Right Softkey** button to enter the **System** menu.
- Using the **Menu Down**, navigate to **Boat Scale** and push the ✓ button.
- Set **Boat Scale** to -2, by scrolling to -2 and pushing the ✓ button.
- Push the **Right Softkey** button to exit to the main screen.

SETTING LEGACY MODE FOR TRACKING:

- Push **Menu Down** once so **Options System** is displayed at the bottom of the screen.
- Press the **Left Softkey** button to enter the **Options** menu.
- AutoPilot Mode** should be highlighted, press the ✓ to confirm.
- Once in the **AutoPilot Mode** menu, select **Legacy**, scroll up, and push the ✓ to confirm selection.
- Push the **Right Softkey** button to exit to the main screen.
- Hold ✓ for a couple of seconds to power off the remote to be stored with the drive.

i-PILOT REMOTE

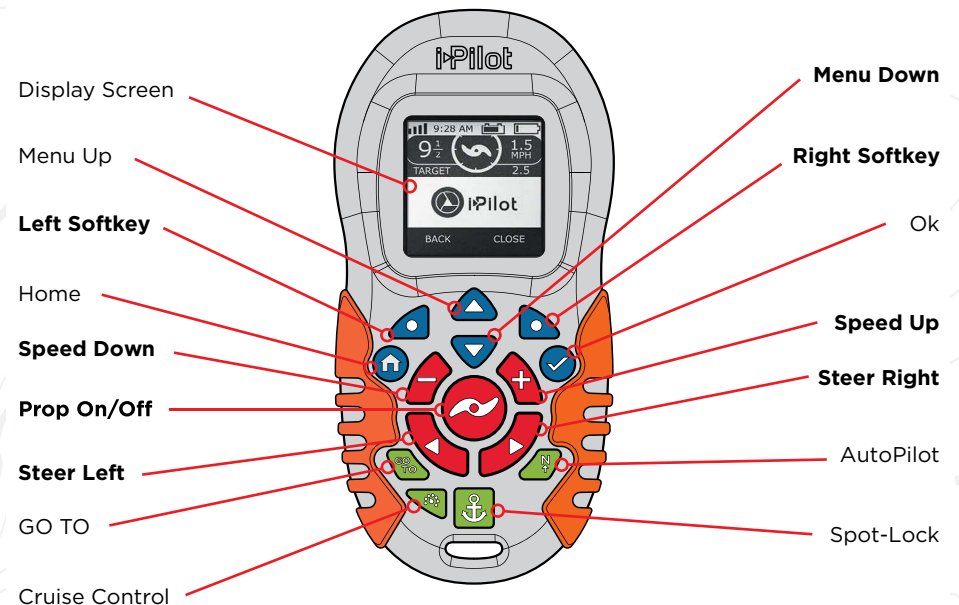

i-PILOT CONTROL HEAD

