

Eureka!

INSTRUCTIONS | Trail Fly 10 (2670003)

SUGGESTED PITCH OPTIONS

The Eureka Trail Fly is a versatile, multipurpose camping accessory. See below for a variety of suggested pitch options. Please note that some pitch options require additional guylines, tarp poles, and/or stakes. The attached carry bag doubles as an integrated paddle pocket for pitching with kayak/canoe paddles.

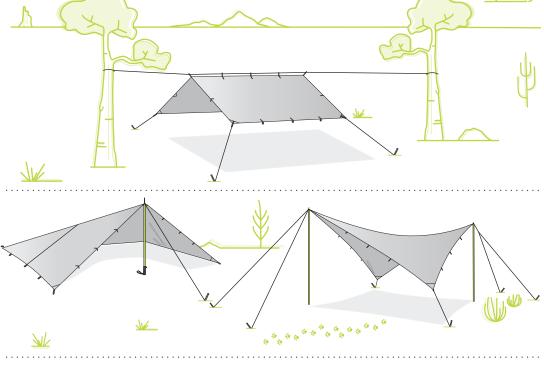

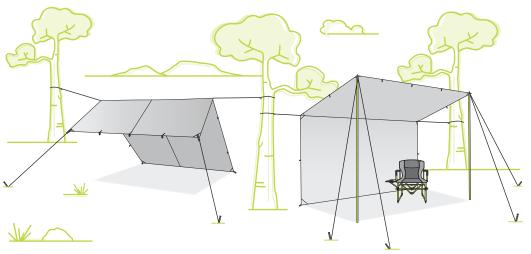

TENT CONTENTS

Tarp Stakes (8) Guylines (8)

QUESTIONS?

Johnson Outdoors Gear, Inc. USA: 1-800-572-8822 www.eurekacamping.com

Johnson Outdoors Canada Canada: 1-800-263-6390 www.eurekatentscanada.com

TENT TIPS

· Always stake down tarp, including all guyout points.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

• Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.