




- 1** Identify all tent components (see list below).

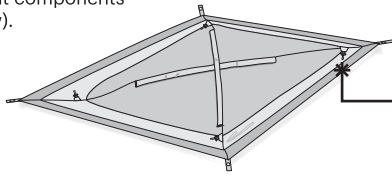


- 2** Spread out tent body and locate 4 corners with hubs.

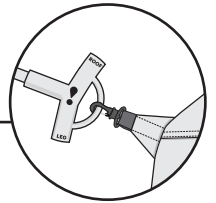

- 3** Assemble 2 roof poles and the 4 leg poles.

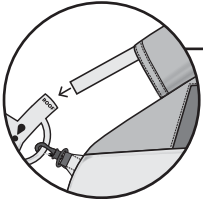


- 5** Insert leg poles into sockets labeled "LEG".

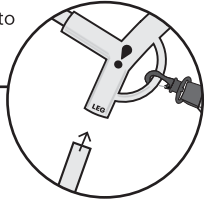


- 4** Insert roof poles through pole sleeves. Insert roof pole ends into the sockets labeled "ROOF". Ensure that roof poles arch in a dome-like manner.



- 6** Insert leg pole tips into each of the 4 corner grommets.

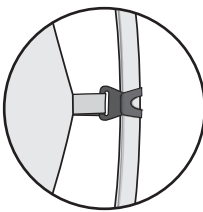

- 8** Place fly over tent body. Locate hook + loop fasteners on underside of fly + attach to roof poles. Locate clips on underside of fly + attach to leg poles.

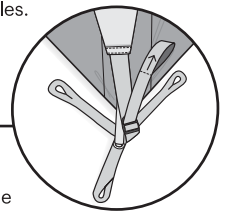


- 7** Attach all tent body clips to frame + stake down 6 webbing loops.


- 9** Secure fly to tent by hooking fly webbing grommet under leg pole tips. Adjust tension of fly via fly webbing and tension locks. Stake down all guylines.

CANOPY SET UP


- 1** Identify CANOPY SET UP components (fly, 2 roof poles, 4 leg poles, 4 corner hubs with extensions). Spread out fly on ground, UP SIDE DOWN.

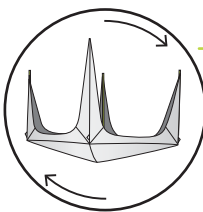

- 3** Assemble leg poles. Insert leg poles into corner hub sockets labeled "LEG". Secure fly by hooking fly webbing grommets under leg pole tips. Adjust tension of fly via fly webbing + tension locks.

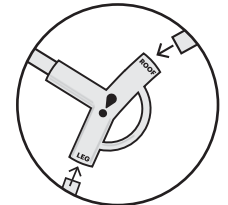

- 2** Assemble 2 roof poles. Place roof poles on top of fly in an X orientation. Insert roof pole ends into hub sockets labeled "ROOF". Attach hook + loop fasteners to roof poles.

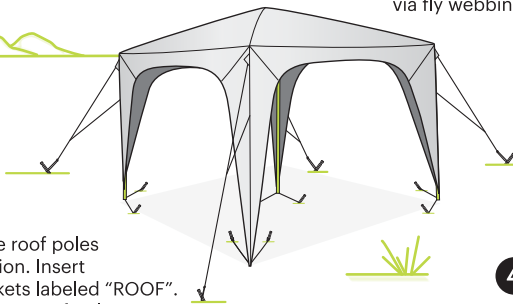

- 4** Flip entire canopy right side up. Stake down and guyout.

TENT CONTENTS

Tent body + Tent fly
Steel leg poles (4)
Fiberglass roof poles (2)
Corner hubs with extensions (4)
Stakes (12)
Gear caddy

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com
Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.