

# Vapor 12 Hatch Installation Instructions

K-01.1331.601B

*Old Town*<sup>®</sup>  
GENUINE WATERCRAFT SINCE 1898

ADVENTURE  
LIVES HERE.

**Thank you for choosing adventure.**

<u>Table of Contents</u>	<u>Pg</u>
1. a. What's in the box?	1
b. Safety Information	
2. Vapor 12 Hatch Installation	2

800-343-1555 | [OLDTOWNCANOE.COM](http://OLDTOWNCANOE.COM)







**Always wear Safety Glasses when handling tools and equipment!**



Before getting started please read all instructions thoroughly to prevent injury or death.

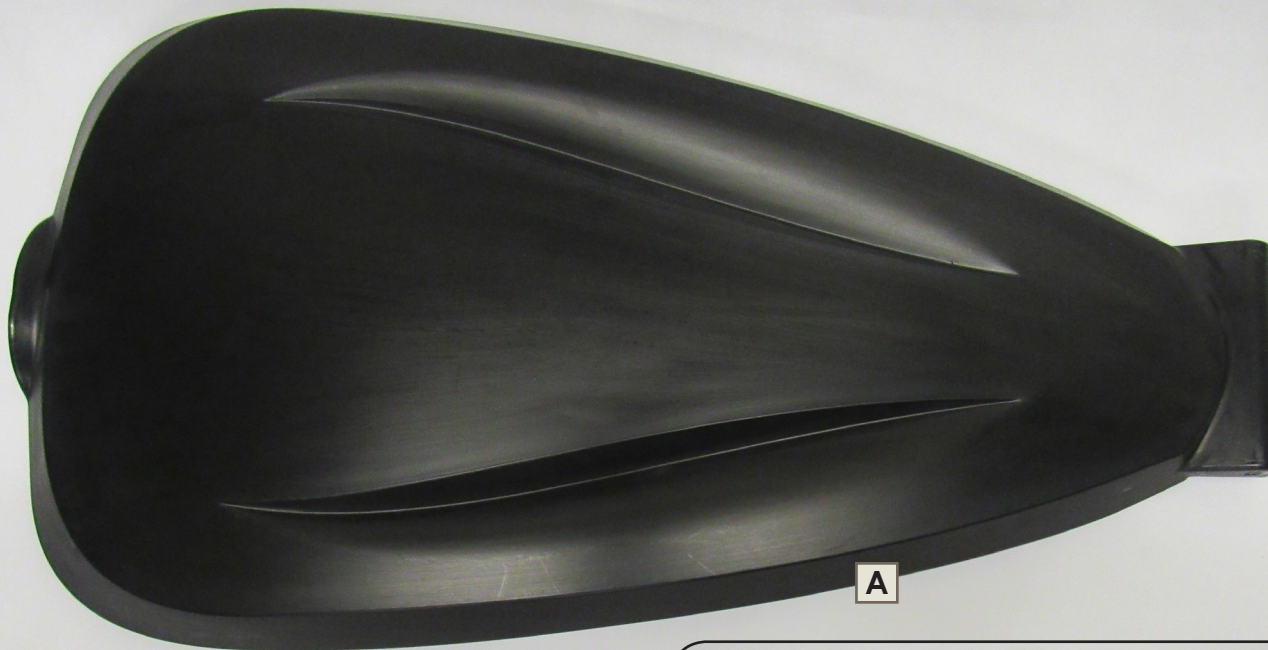

A

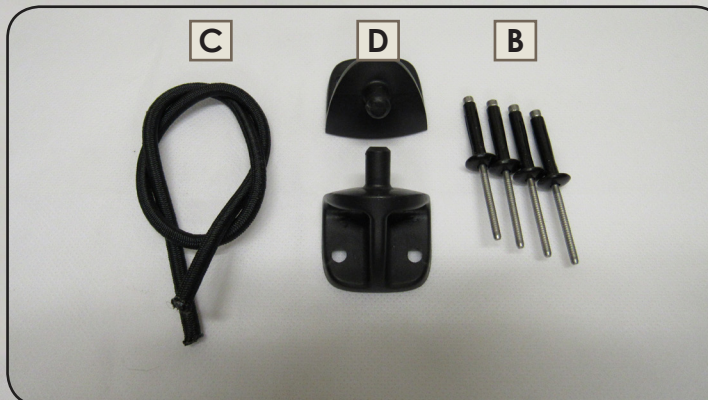

C

D

B

Ref.	Part	Part Number	Qty.
A	Vapor 12 hatch	01.1315.2816	1
B	Cherry Riverts	01.1315.0459	4
C	Hatch Rope(14")	01.1331.0728	1
D	Hatch Hinge	01.1315.2812	2

✓	TOOLS REQUIRED:
	Safety Glasses
	Drill
	1/4" Drill Bit
	13/64" Drill Bit
	Rivet Gun
	Pliers
	Hand File

## 2 | Vapor 12 Hatch Installation



1. Position your Vapor 12 Kayak in a flat upright position and center the Vapor 12 Hatch(A) over the hatch opening.




2. Using the hatch lip as a guide, drill two holes with a 1/4" drill bit into the kayak hull at a slight angle.



3. Knot one end of the Hatch Rope(C) and run it up through one of the newly drilled holes. Stretch it over to and down through the other hole. Tie a knot in the end of it. Both knots should be located inside the hull.



4. With the cover centered over the hatch, insert the Hatch Hinges(D) into each side of the cover. Use the hinges as a jig to drill out the rivet holes with a 13/64" Drill Bit.

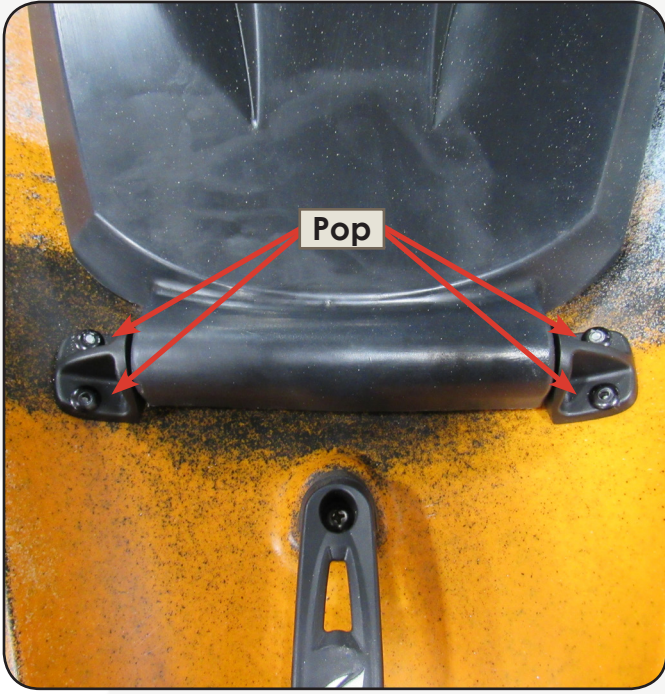

5. Insert the Cherry Rivets(B) into each hole and pop with your Rivet Gun.

Note: If the rivet does not break flush, use pliers to bend the post back and forth to break. Then file any burrs smooth with a small Hand File.



Your Vapor 12 Hatch Cover Installation is complete!