

Vapor 10 Hatch Installation Instructions

K-01.1331.600B

Old Town[®]
GENUINE WATERCRAFT SINCE 1898

ADVENTURE
LIVES HERE.

Thank you for choosing adventure.

Table of Contents Pg

| | |
|-----------------------------------|---|
| 1. a. What's in the box? | 1 |
| b. Safety Information | |
| 2. Vapor 10 Hatch Installation | 2 |

800-343-1555 | OLDTOWNCANOE.COM







Always wear Safety Glasses when handling tools and equipment!



Before getting started please read all instructions thoroughly to prevent injury or death.

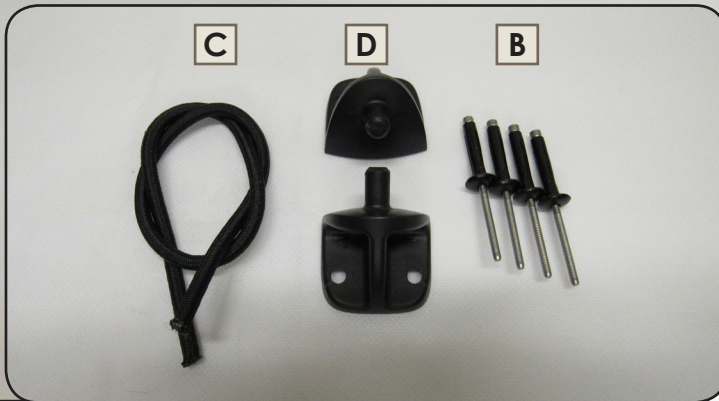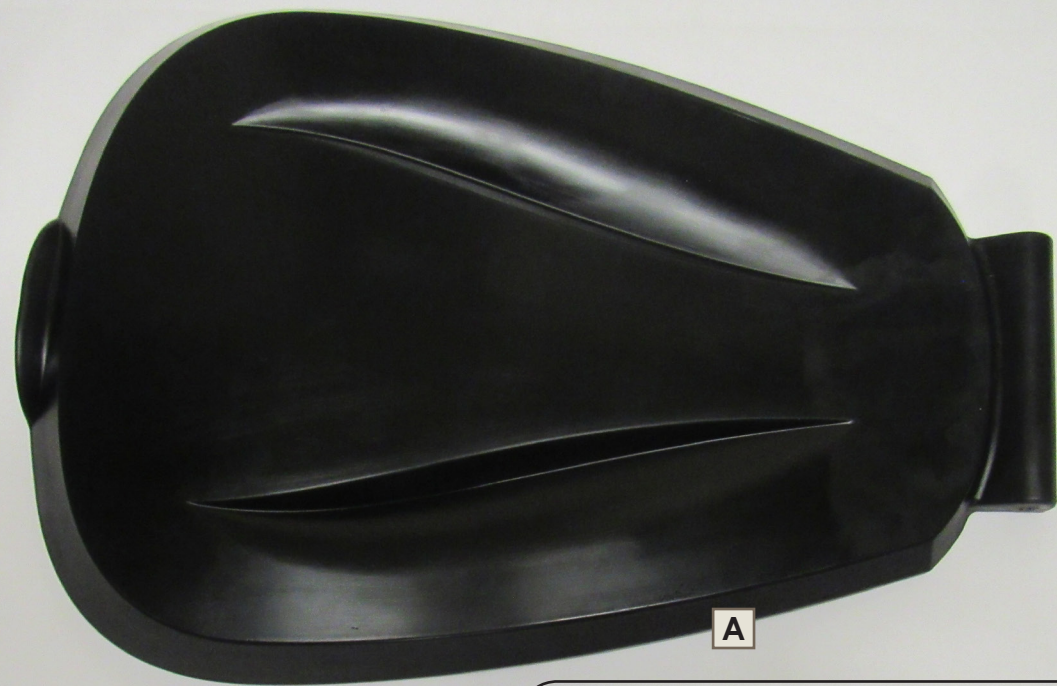

| Ref. | Part | Part Number | Qty. |
|------|-----------------|--------------|------|
| A | Vapor 10 hatch | 01.1315.2815 | 1 |
| B | Cherry Riverts | 01.1315.0459 | 4 |
| C | Hatch Rope(14") | 01.1331.0728 | 1 |
| D | Hatch Hinge | 01.1315.2812 | 2 |

| ✓ | TOOLS REQUIRED: |
|---|------------------|
| | Safety Glasses |
| | Drill |
| | 1/4" Drill Bit |
| | 13/64" Drill Bit |
| | Rivet Gun |
| | Pliers |
| | Hand File |

2 | Vapor 10 Hatch Installation



1. Position your Vapor 10 Kayak in a flat upright position and center the Vapor 10 Hatch(A) over the hatch opening.



2. Using the hatch lip as a guide, drill two holes with a 1/4" drill bit into the kayak hull at a slight angle.



3. Knot one end of the Hatch Rope(C) and run it up through one of the newly drilled holes. Stretch it over to and down through the other hole. Tie a knot in the end of it. Both knots should be located inside the hull.



4. With the cover centered over the hatch, insert the Hatch Hinges(D) into each side of the cover. Use the hinges as a jig to drill out the rivet holes with a 13/64" Drill Bit.



5. Insert the Cherry Rivets(B) into each hole and while pressing down on each Hatch Hinge, pop the rivets with your Rivet Gun.

Note: If the rivet does not break flush, use pliers to bend the post back and forth to break. Then file any burrs smooth with a small Hand File.



Your Vapor 10 Hatch Cover Installation is complete!