


Rod-Paddle Clip Kit

125 Gilman Falls Road
Building B
Old Town, ME 04468 USA
800-8-KAYAKS

Please read kit instructions carefully prior to installation.

KIT CONTENTS			
Ref. Letter	Part Number	Description	Quantity
A	01.1315.0459	Cherry Rivets	4
B	07.1060.0000	Rod / Paddle Clip	2
C	01.1315.1564	AA611D Rivets	4
D	01.1315.1568	3/16 Backup Deck Washers	4

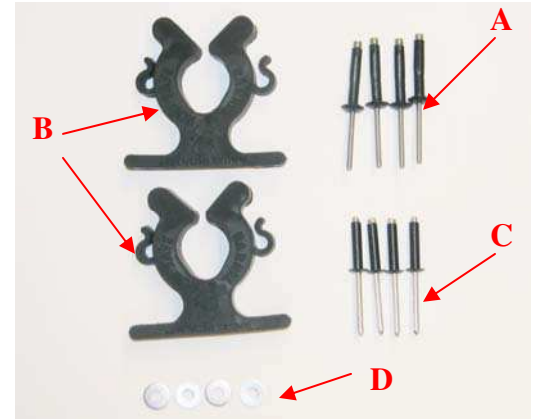

TOOLS REQUIRED: Drill with 13/64" bit, marking pencil, rivet gun, pliers, small file

Before getting started we recommend sorting out and separating the parts for easy access during assembly

1. Place the Rod / Paddle Clips on a flat surface of your boat. Location can vary but they should be within easy reach to be able to efficiently grab your paddle or fishing rod. When your location is set, mark the boat with your pencil using the mounting holes in the clips as a guide.
2. Remove the clips and with the four holes marked on the boat, drill them out using a 13/64" bit.
3. Set the clips back in place. If you are installing these on an Ocean Kayak place the Cherry Rivets (A) (these rivets have rings along the length of the post) through the clips and into the boat. If you are installing these on an Old Town or Necky Kayak use the AA611D Rivets (C) with a Backup Deck Washer (D) on the underside of the rivet inside the boat.
4. With your rivet gun, pop the rivets. If you are using the washers on the underside of the rivets you will need to hold the washer in place while you pop the rivet. If the rivet does not break flush, grab the remaining post sticking out of the rivet with your pliers and bend it back and forth and it will break off. If the rivet head is jagged, use your small file to smooth it down.
5. The Rod / Paddle Clip installation is now complete.

Rev. A

Issue Date: 12/08/2010

Doc. # K-07.1061.0000

Page 1 of 2